





MANUFACTURING PLANT & HEAD OFFICE  
 13504 ST. ALBERT TRAIL, EDMONTON,  
 AB. T5L4P4, PHONE (780) 453-3761  
 FILE: THERMODORZNEW

**HINGE MOUNT Z BRACE INSTALLATION INSTRUCTIONS**  
**THERM-O-DOR DOORS**

**NOTE:**  
 - WHEN THERE ARE MORE DOOR SECTIONS THAN Z BRACES, WE SUGGEST EQUAL DISTRIBUTION COMBINED WITH ONE Z BRACE ON THE TOP SECTION AND ANOTHER ON THE BOTTOM SECTION.

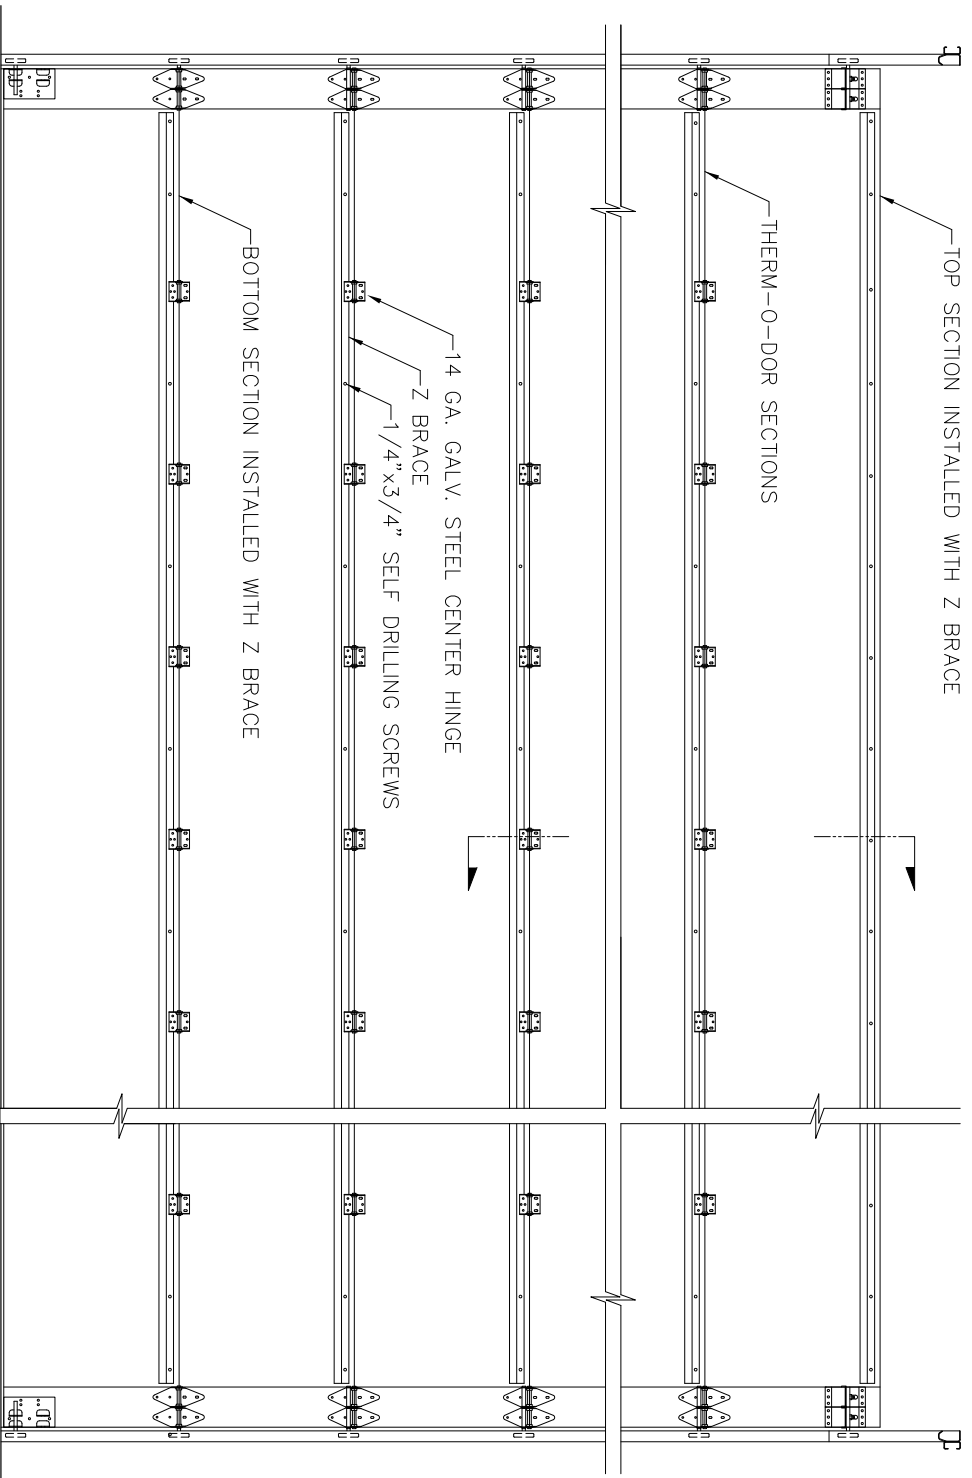

**INTERIOR ELEVATION**  
 SCALE: NTS

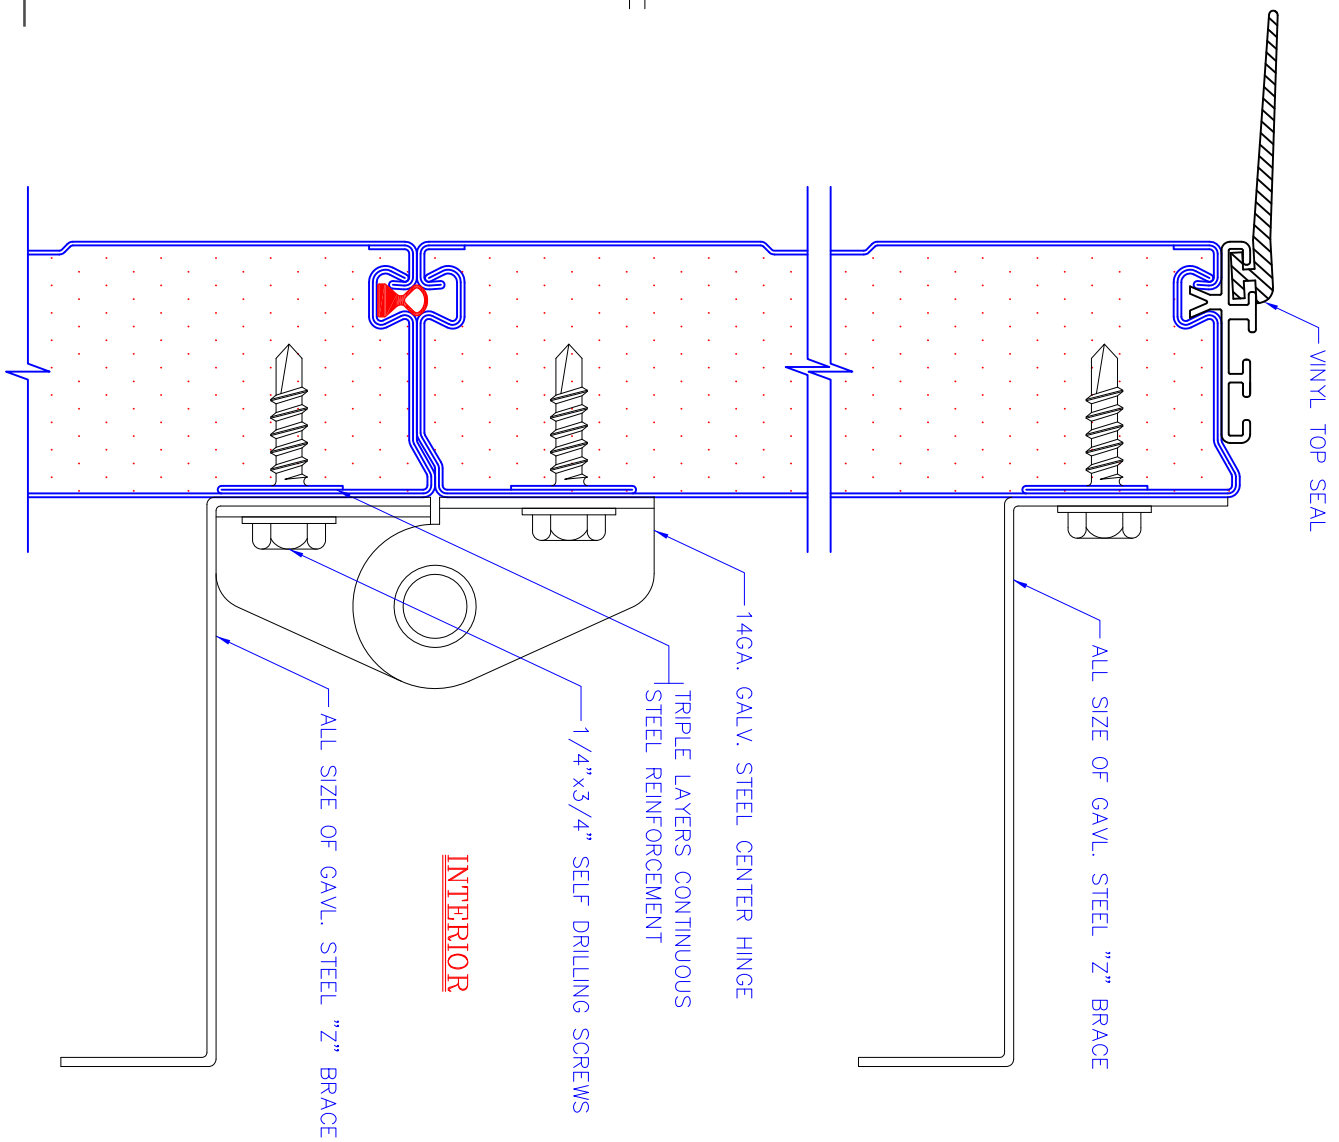

**THERM-O-DOR SECTION VIEW**  
 SCALE: NTS