



TD134 THERM-O-DOOR DOORS
HINGE MOUNT Z BRACE INSTALLATION INSTRUCTIONS

NOTE:
 - WHEN THERE ARE MORE DOOR SECTIONS THAN Z BRACES, WE SUGGEST EQUAL DISTRIBUTION COMBINED WITH ONE Z BRACE ON THE TOP SECTION AND ANOTHER ON THE BOTTOM SECTION.

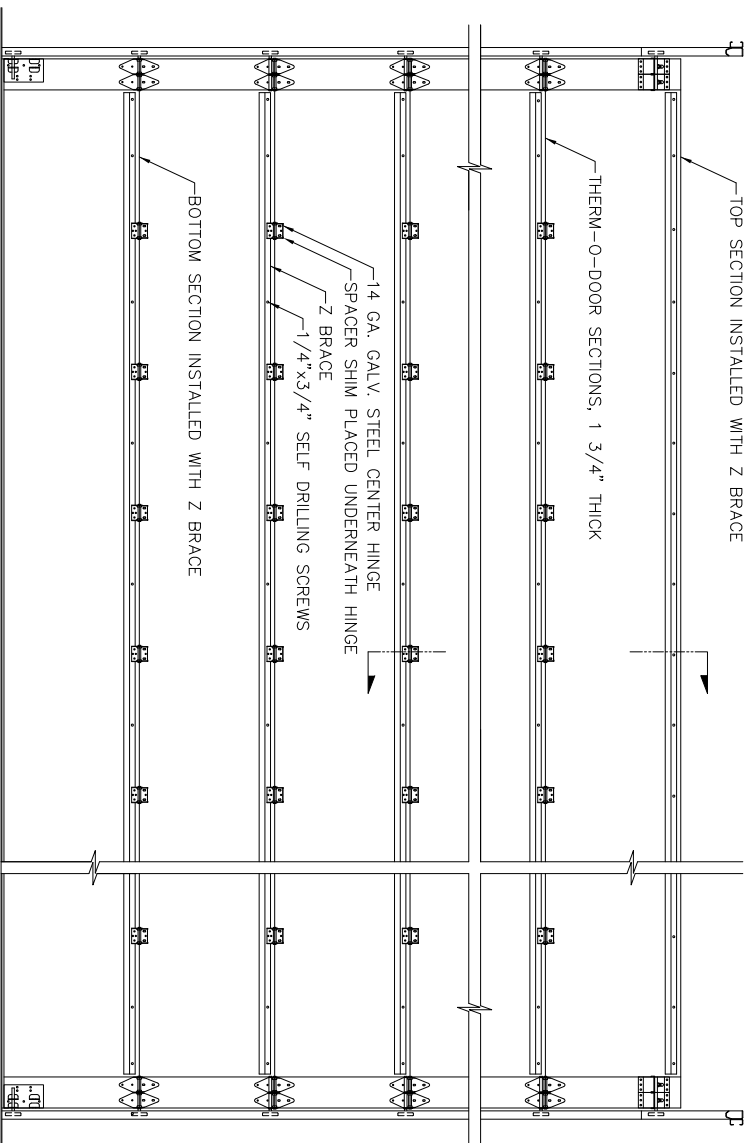

INTERIOR ELEVATION
 SCALE: NTS

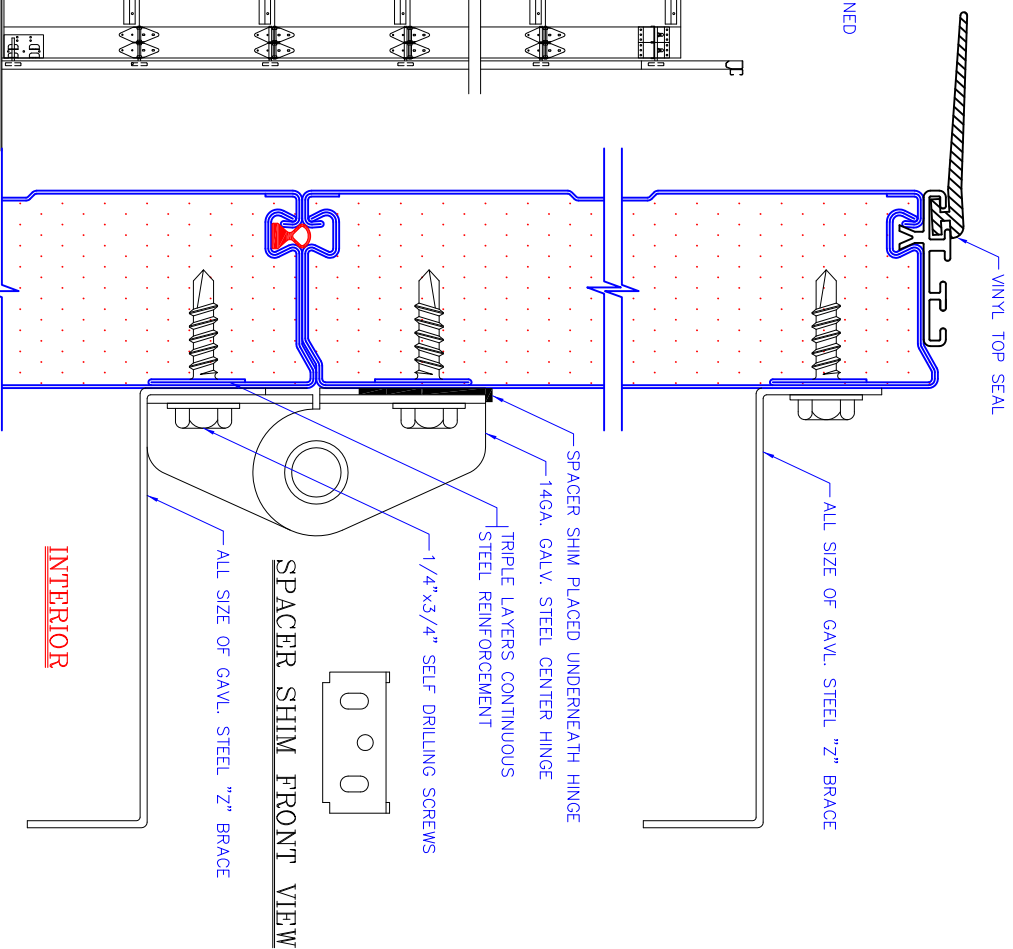

THERM-O-DOOR SECTION VIEW
 SCALE: NTS

INTERIOR